


Cleaning the print head

- ❶ Flip off the SC-2000USB's power switch.
- ❷ Open the ink ribbon compartment cover, then pull back the print head cover.
- ❸ Use the enclosed print head cleaning pen to gently wipe back and forth along the print head.
 - ⚠ *Be careful not to touch the print head.
Keep the cap on the print head cleaning pen when it is not being used.*
- ❹ Release the print head cover and close the ink ribbon compartment cover.
- ❺ Try printing again.
- ❻ If the printed characters are still blurred, repeat steps ❶ through ❺.

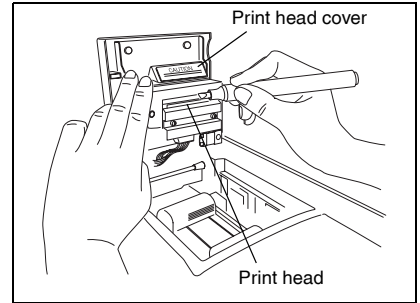

Replacing the xenon lamp unit

The xenon lamp unit has a life span of approximately 2000 flashes. When the message "REPLACE Xe UNIT" appears on the display, the xenon lamp unit must be replaced.

- ❶ Press the Mode button on the SC-2000USB until "RESET COUNTER" appears on its display, then press the Set button.
- ❷ Slide the xenon lamp unit release lever up and pull out the xenon lamp unit.
- ❸ Fully insert the new xenon lamp unit until it locks into place. Check that "N = 0" appears on the display of the SC-2000USB.
- ❹ Press the Set button on the SC-2000USB.

